

LED WALL LIGHT Installation Instructions

Thanks you for purchasing this quality LED product. To ensure correct function and safety, please read and follow all instructions carefully before using the product. Please keep instructions for future reference.

Product Specification

Model	Power	ССТ	Beam Angle	CRI	Input Volatge	Housing Color
38005-01-WW	10W	3000K	100°	CRI80	AC210-250V 50/60Hz	White
38005-02-WW	10W	3000K	100°	CRI80	AC210-250V 50/60Hz	Black
38006-01-WW	20W	3000K	100°	CRI80	AC210-250V 50/60Hz	White
38006-02-WW	10W	3000K	100°	CRI80	AC210-250V 50/60Hz	Black

IMPORTANT

It is recommended that luminaires are installed and fitted by a qualified electrician ensuring the installation complies.

These products are designed for connection to 210V-250V \sim main supply. This appliance will be considered Class I.

Switch off the mains supply before installation or servicing. This product indoor use only.

There are not responsible if their fixtures are not installed according to local safety standards or damage resulting from incorrect use.

This product is suitable for direct mounting on normally flammable surfaces.

Dust off the device and if necessary use a soft sponge.

Never use alcohol or dissolvents.


The light source of this luminaire is not replaceable: when the light source reaches its end of life, the whole of the luminaire shall be replaced.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

WARNING

- * The LED downlight must be installed by a registered electrician;
- * Ensure that the main electrical supply is switched off before installing the fixture;
- * If cable is defective, do not use;
- * If in doubt consult a qualified electrician;
- * To clean, wipe with a damp clean cloth. Never soak the fitting with water.

INSTALLATIONS

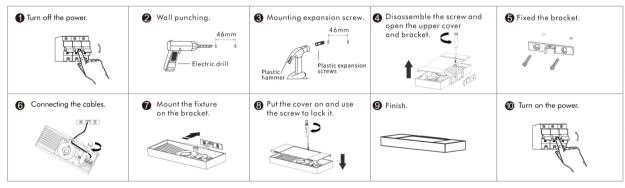

WARRANTY

This LED products is subject to our standard warranty. Any modifications to this product or installing NOT according to the installation instructions above will void the warranty.





Elektriciteit Paul De Meutter CV Industriepark 13 B - Zone B 2220 Heist-op-den-Berg, Belgium